


# ViewSonic® Corporation

ViewPad 7e Firmware Upgrade Through Micro SD Card Instruction Guide

---

## ViewPad 7e Firmware Upgrade Through Micro SD Card Instruction Guide






# ViewSonic® Corporation

## ViewPad 7e Firmware Upgrade Through Micro SD Card Instruction Guide

---

### Index

System Requirement .....	3
Note .....	3
Step By Step Install Guide .....	4



# ViewSonic® Corporation

## ViewPad 7e Firmware Upgrade Through Micro SD Card Instruction Guide


---

### System Requirements

1. ViewPad 7e device
2. Micro SD card
3. ViewPad 7e firmware file - F70\_VSEI\_S\_W\_C\_11252011.zip

### Note

1. Please make sure the battery power is more than 30% or the AC adapter is plugged in.
2. You can optionally upgrade firmware through OTA. About OTA firmware upgrade procedure, please refer to *ViewPad 7e OTA Firmware Upgrade Instruction Guide*.
3. This firmware version will erase all data on your ViewPad 7e.




# ViewSonic® Corporation

## ViewPad 7e Firmware Upgrade Through Micro SD Card Instruction Guide


### Step By Step Install Guide

1. Confirm that there is no other ViewPad 7e firmware file in the micro SD card.
2. Copy the new ViewPad 7e firmware file to the micro SD card root folder.

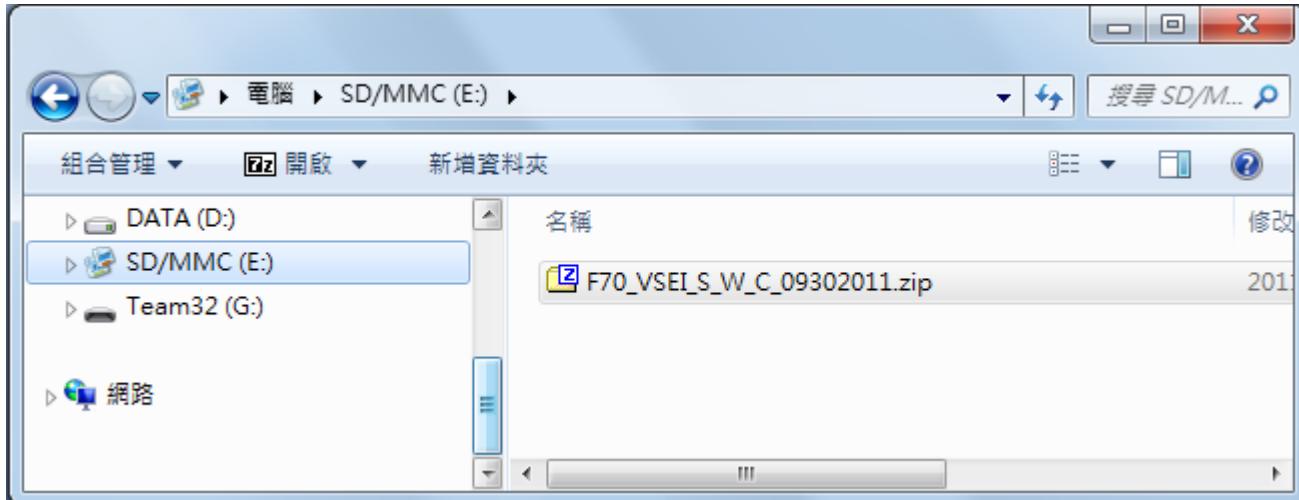

3. Turn off the ViewPad 7e and insert the micro SD card to the device.
4. Keep pressing the volume up and power button at the same time.






# ViewSonic® Corporation

## ViewPad 7e Firmware Upgrade Through Micro SD Card Instruction Guide

5. Until the ViewSonic logo flashes, release the buttons.
6. The device will automatically start firmware upgrade.

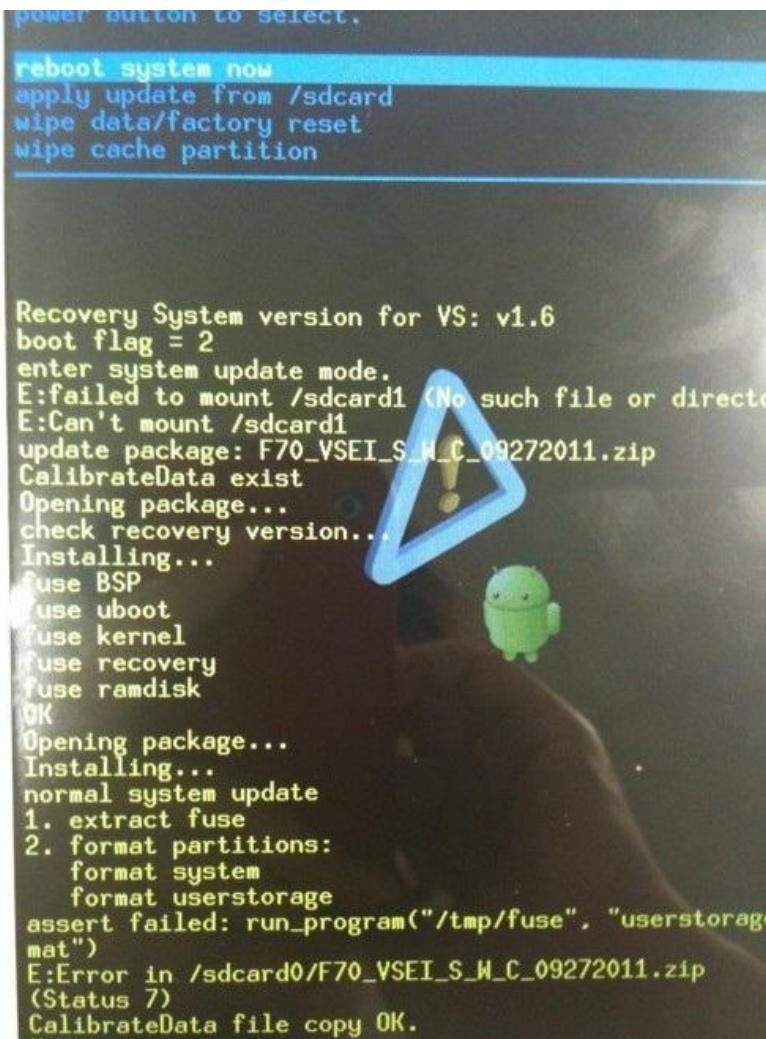

7. After the firmware upgrade successfully, the ViewPad 7e will automatically shutdown. And you can manually boot it up to configure the basic settings.